

enduraPRESS MP5 USER MANUAL



REV 10/27/2020

TABLE OF CONTENTS

Page

1	Specifications
2	Operation Instructions Read Before Use
3	Control Panel Operations
4	Different Fittings and Changing The Fittings
5	Heat Transfer Application Guidelines
6	Troubleshooting Tips
7	Wiring Schematic



Specifications:

Model NO: ENDURAPRESS MP5

Voltage: 110V/60Hz/320w

Power:

Control Panel: LCD Control Panel

Time Range: 0~999sec.

Temp. Range: 0~480°F

Packaging: Double-walled Corrugated Paper Carton

Gross Weight: 13lbs (6kg)




OPERATION INSTRUCTIONS

READ BEFORE USE

1. Check the voltage before using it. The correct voltage is 110-120V/60Hz
2. Turn off the machine when not in use, and remove the power plug from socket.
3. Grasp the handle firmly when opening.
4. Keep children away from the machine.
5. **Caution:** Do not touch the heating platen or the interior of the mug sleeve during operation, immediately after a mug press cycle, or at anytime when the press is at operating temperature. Touching the inside of the mug press fitting may cause burn injury.
6. Do not attempt to press products that are not intended for normal heat transfer
7. Do not set the temperature any higher than 480F as it may cause over heat and stop working.
8. The heat press carries a ground line by default, please make sure the socket gets a ground line protector.

CONTROL PANEL OPERATIONS

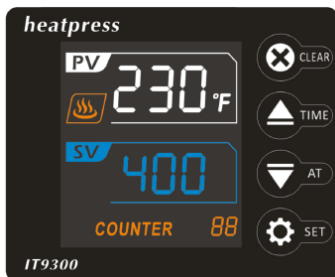

Control Panel Display




P-1: Temperature Setting Mode

Hit SET & use the up and down arrows to set temperature




P-2: Time Setting Mode

Hit SET twice & use the up and down arrows to set amount of time for pressing

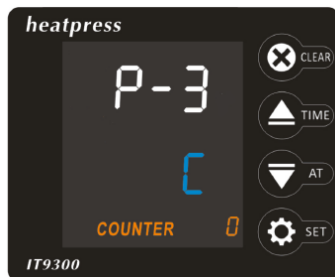

P-3: °C or °F Read Out

Hit SET three times & use the up and down arrows to select Celsius or Fahrenheit

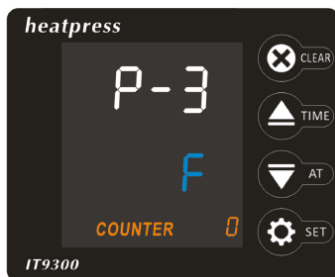

P-3: °C or °F Read Out

Hit SET three times & use the up and down arrows to select Celsius or Fahrenheit



P-4: Auto Shut Off Mode


Hit SET four times & use the up and down arrows to set auto shut off when inactive 0-120 minutes range



Auto Shut Off Mode

The screen will read OFF and start to cool down if heat press is inactive

To reheat the press, hit any button

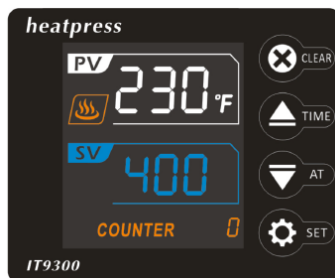

Clear Counter Number

Long hold the CLEAR button to clear your counter on the panel.

Other Functions



If you need to calibrate your press, hold the down arrow for a few seconds.



If you need to clear your counter, hold your clear button for a few seconds.

CHANGING THE FITTINGS

The default fitting is ideal for 11 oz mugs, but we offer other fittings for larger and smaller cups as well.

Caution: Because the platen is very small, the mug press heats up quickly. Make sure the press is off and at room temperature before attempting to change the fittings.

- 1) Turn the collar on the power cable to loosen the connection, then unplug the connector cable from the control panel housing (Fig 1).
- 2) Unscrew the phillips head screws or thumbscrews that hold the fitting in the frame of the mug press (Fig 2). Once all screws have been removed, pull the fitting free of the frame.
- 3) Installing the new fitting is the reverse process: Place it in the frame, reinstall the screws to secure the sleeve, and connect the circular connector to the mug press.

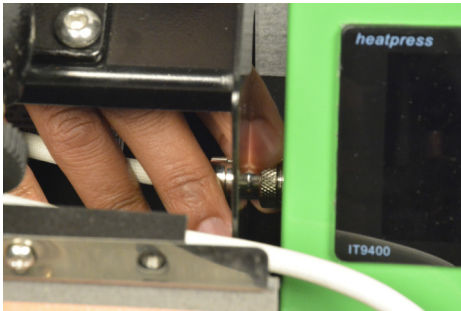


FIG 1: Disconnect the power cable before removing the fitting.

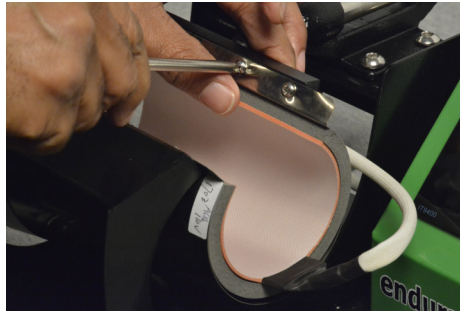


FIG 2: Remove the screws or thumb screws securing the fitting.



FIG 3: Some fittings are conical and designed for tapered drinkware.

OPTIONAL MUG FITTINGS

SignWarehouse has fittings that will fit mugs from 2.5oz to 15oz standard mugs and two conical fittings for latte mugs and other tapered drinking vessels.



2.5oz fitting
for espresso mugs
SE-XH-EP-MP5-MF25



10oz fitting
for conical mugs
SE-XH-EP-MP5-MF10



12oz fitting
for larger cylindrical mugs
SE-XH-EP-MP5-MF12



15oz fitting
for large coffee mugs.
SE-XH-EP-MP5-MF15



17oz fitting
for conical latte mugs.
SE-XH-EP-MP5-MF17

HEAT TRANSFER APPLICATION GUIDELINES

These are general guidelines. For specific time and temperature settings for specific films and/or transfer papers, please refer to the instructions for that particular product.

TRANSFERS	Device	Fabric	TEMP.	TIME	PRESSURE
mugs: sublimation	MP5 Mug press	polymer-coated	400° F	240 seconds	medium
mugs: laser transfer*		uncoated	300°F	180 seconds	firm
General Guidelines for heat transfers with other EnduraPRESS models					
Sublimation Paper	Ricoh, Epson	Polyester	400°F	25~30sec.	30Psi
Ink Tran. Paper	Inkjet Printer	Light Color	365°F	15sec.	30Psi
		Dark Color	330°F	25sec.	30Psi
Laser Transfer Paper**	Laser Printer	Light Color	345°F	30sec.	30Psi
	Laser Printer	Dark Color	260 - 320°F	35 - 120 sec.	25Psi
Transfer Vinyls	Cutting Plotter	/	300~320°F	8~10sec.	30Psi
Plastisol Transfer	/	/	335°F	12sec.	50Psi

* Laser transfers for mugs and tumblers require special self-weeding laser transfer paper for hard surface applications.

** Laser transfers for apparel require special one or two-step self-weeding transfer papers

TROUBLESHOOTING TIPS

Q. Why isn't my heat transfer vinyl sticking to the fabric?

A. This can be caused by three things. Insufficient pressure, or temperature, or time.

Time: Some heat transfer films need a few seconds to cool before you remove the liner. Try a warm or cold peel first.

Temperature: If that doesn't work, check to make sure you are using the recommended time and temperature settings. If you are, your press may not be putting out the correct amount of heat. Use a Geo Knight IR thermometer to check the actual temperature of the platen. If it is more than 5° different from the LCD display (PV), adjust it using step four in the control panel (see page 4).

Pressure: If the temperature is correct, adjust the pressure. Some films require more pressure to bond the adhesive to the fabric. There should be some resistance when you close the press. If you have verified all of these and the film doesn't stick, contact SIGNWarehouse customer service or Technical Support for further assistance.

Q. Why does my sublimated transfer look washed out?

A. This is usually caused by insufficient temperature. Sublimation works best at or near 400°F.

If your transfer is faded, check the output of the heat platen with a contact thermometer and make sure the output matches the displayed temperature. If not, adjust as directed above. Then repress at 390 - 400°F.


Q. Why are my transfers are sticking to the heating element of the upper platen?

A. If T-shirt vinyl is sticking to the heating element, you have it upside down. Remove any adhesive residue, flip it over and try again. If an inkjet or laser transfer is sticking to the heating element, it's because the heat is affecting the ink. Cover it with a Teflon sheet or sheet of silicone Kraft paper to prevent this. Using a Teflon sheet or Kraft paper is recommended for almost all heat transfer applications.

Q. Why is it so hard to peel the liner when I'm done pressing the paper?

A. A hot or warm peel film may become hard to peel if allowed to cool. Always peel the film or transfer paper in accordance with the product's recommendations.

WIRING SCHEMATIC

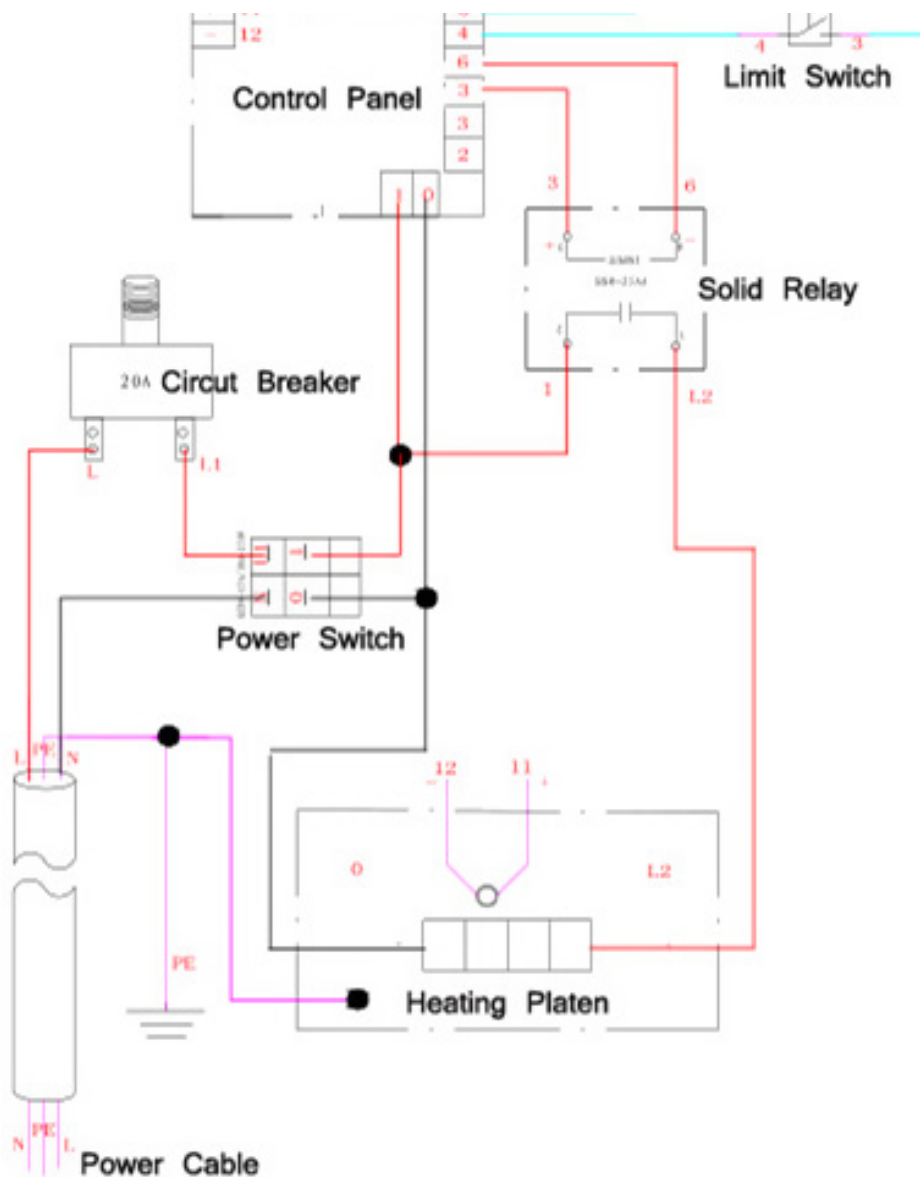

WARRANTY

Thank you for choosing our products, you are entitled to one year free warranty service for our products. All exceeds warranty period we will still provide technical supports and maintenance guidance.